



Comments:

1. Cut Hi-Flex EPDM Lexflash II flashing pieces in the shape and proportions shown below. Soften and crease the base piece with a hot-air gun in colder temperatures.
2. Fold the base piece and apply to the main membrane according to seaming directions.
3. Apply cover piece according to seaming directions. Caulk edges with Hi-Flex EPDM Lap Sealant and tool.


Step 1

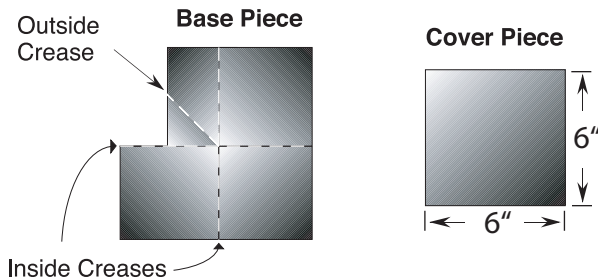

Step 2

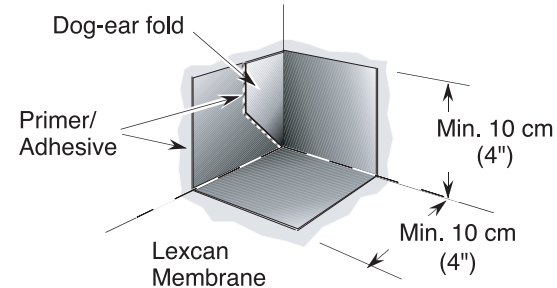

Step 3

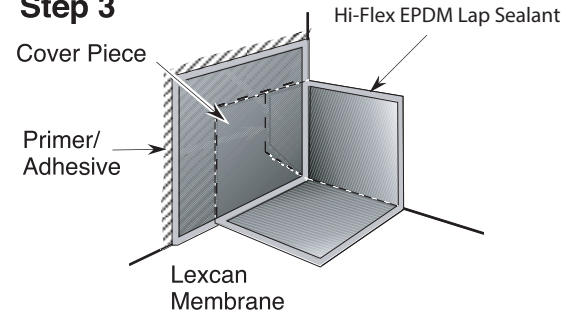

Field Fabricated Inside Corner 2 Roofing System Detail

Scale: Not to scale

Date: August, 2016

Detail No.: L-S-302