


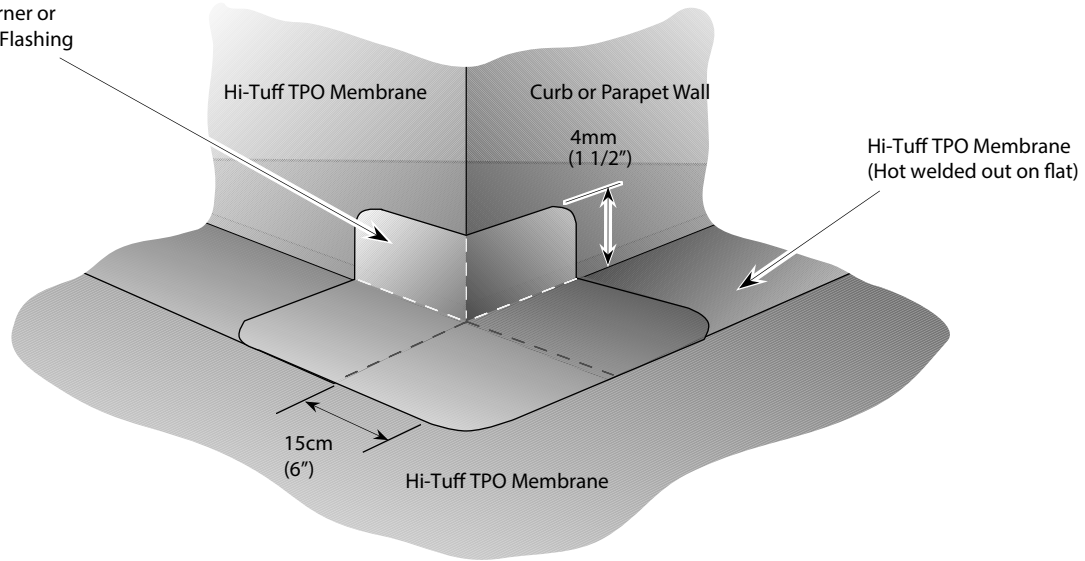

Hi-Tuff TPO Corner or
Un-Reinforced Flashing



-  --- Indicates fold in Hi-Tuff Unsupported Membrane
-  --- Indicates cut in overlapping primary Hi-Tuff Membrane

- Notes:
1. Perimeter membrane fastening should be started within 15 cm (6") of corner.
 2. If using Un-Reinforced Flashing, cut square piece with rounded corners approximately 15cm (6") square.



Outside Corner Roofing System Detail

Scale: Not to scale

Date: August, 2016

Detail No.: H-S-303